DOOR SENSOR WITH AUTO NOTIFICATION

SKU: DOORSPY

USER MANUAL
FCC CE

THANK YOU FOR PURCHASING THE DOOR SENSOR

Please read this manual before operating the door sensor and keep it handy.

The Door Sensor has magnetic sensors that detect when your door is opened and then automatically sends you a text message.* This multi-function alarm is simple to operate and can be easily installed by any user in a home, office, store or warehouse. This device works with SIM cards** enabled with the following technology:

- Global Systems Mobility (GSM), which was developed for effortless installation, increased user mobility, integrated telephony, switched and packet data support, facsimile, and text messaging services.
- Location Based Services, which convert geographical coordinates to something meaningful to you. Assisted GPS overcomes the low data rate of conventional GPS and extends GPS coverage to indoor locations.

**IMPORTANT NOTICE: To receive text messages, you must be in a location with a cellular signal.*

*** IMPORTANT NOTICE: This product does **not** include the GSM enabled SIM card. You can purchase these at any phone company that sells SIM cards.*

Your purchase should include:
1 x Door Sensor with Auto Notification
1 x USB Cable
1 x AC Adapter
1 x Instruction Booklet

Contact **770-694-6921** if you are missing any of these components.

GET FAMILIAR WITH YOUR DOOR SENSOR

MODEL A

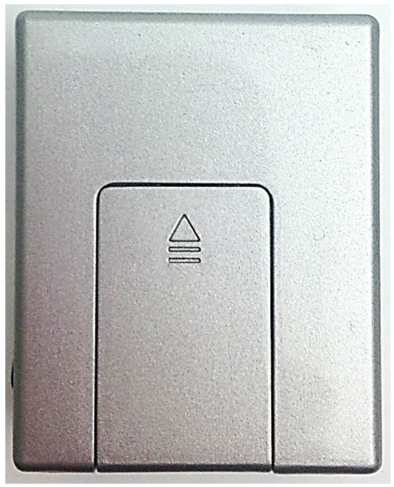

Figure 1: Front View + SIM Card Slot

Figure 2: Magnet Side

Figure 3: USB Port

MODEL B

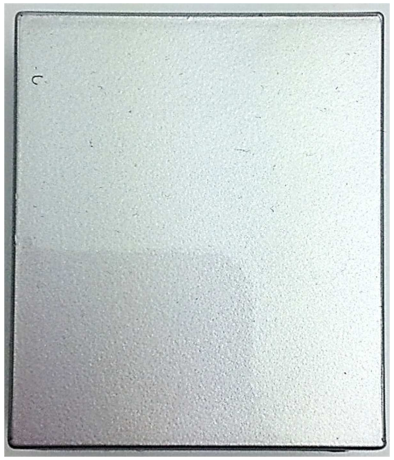

Figure 4: Front View

Figure 5: Magnet Side

Figure 6: USB Port + SIM Card Slot

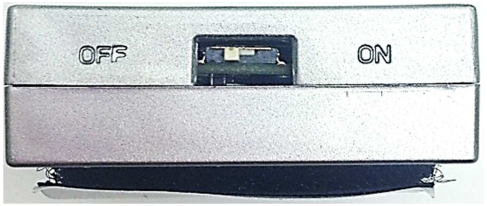

Figure 7: On / Off Switch

Figure 8: Microphone

MODEL C

Figure 9: Front View

Figure 10: USB Port + SIM Card Slot

Figure 11: On / Off Switch

Figure 12: Microphone

BEFORE OPERATING THE DOOR SENSOR

You will need to visit your nearest retail store that sells cell phones and accessories where you will need to purchase a **GSM-enabled SIM card** for the door sensor. This SIM card will assign a phone number to the door sensor, which you will then use to communicate with the door sensor.

OPERATING THE DOOR SENSOR

IMPORTANT NOTICE: Allow the device to charge 4 – 6 hours before using.

HOW TO CHARGE THE DOOR SENSOR

1. Slide the On / Off Switch to ON
2. Plug the AC adapter into a wall outlet
3. Plug the USB cable into the AC adapter
4. Plug the USB cable into the device

HOW TO BOOT THE DOOR SENSOR

1. Insert the GSM-SIM card into the device
    - Depending on your model, the SIM card will either go
        i. Into the back of the device beneath the panel
        ii. Into the open slot on the side of the device
2. Slide the On / Off Switch to ON
3. Wait 30 seconds for the red indicator light to turn on

HOW TO MOUNT THE DOOR SENSOR

1. Peel the sticky seal off the back of the closing bracket and mount it to the door's side panel at the desired height
2. Peel the sticky seal off the back of the magnet box and mount it to the door
    - Make sure the side of the magnet box that reads "Magnets Direction" aligns with the closing bracket

HOW TO SYNC YOUR PHONE WITH THE DOOR SENSOR

1. Send the text message **HM1** to the cell phone number associated with the door sensor.
    - The alarm should now recognize your phone as the emergency contact to which it needs to send calls and text messages.

*IMPORTANT NOTICE: You can sync up to five phone numbers with the door sensor. Each additional phone should use the message codes **HM2, HM3, HM4,** and **HM5**.*

CHOOSING YOUR SETTINGS

Send these text commands to the cell number assigned to the SIM card in your door sensor:

- **LAG1**: Change language to Chinese.
- **LAG2**: Change language to English.
- **LAG3**: Change language to Russian.
- **GDM1**: Start detecting sound. The alarm calls your phone if it detects sound.
- **GDM2**: Stop detecting sound.
- **GDM3**: Check the remaining battery life.
- **GDM4**: Start the magnetic sensor. The alarm calls your phone if the door is opened and/or closed
- **GDM5**: Stop the magnetic sensor.
- **SJ** or **TIM**: Start detecting sound. The alarm calls your phone after a certain time interval if it detects sound.
- **MY** or **LBS**: Report GMS base station ID and location map link.
- **MOD1**: The alarm will send you an SMS text first and then call.
- **MOD2** or **CALL**: The alarm will only call your phone.
- **MOD3** or **SMS**: The alarm will only send you an SMS text.

TROUBLESHOOTING

THE DEVICE WON'T TURN ON

- Charge the device for at least 4 hours before the first use.
- Make sure the charging cable is securely inserted into the device and into the power source.

THE DEVICE ISN'T CHARGING

- Replace the battery or charging cable.
- Replace the AC adapter.

THE DOOR SENSOR IS NOT CALLING ME OR ANSWERING WHEN I CALL

- Make sure the GSM-SIM card is in the alarm.
- Determine whether the alarm is connected to the GSM network.
    - Contact the mobile carrier from which you purchased the SIM card and confirm that the SIM card uses on of the following frequencies:
        - GSM900MHz/DCS1800MHz
        - GSM850MHz/DCS1900MHz
- Check that there is a cell phone signal in your area

OTHER PROBLEMS

- Call our technical support at **770–694–6921**

SPECIFICATIONS

Battery Life	150 hours